



POLYPROPYLENE STEPS

DESCRIPTION

Steps for underground visiting boxes.





DRAWINGS

Type	Reference	Lenght	Width
300 Curved	922035	235	300
300 Straight	922036	233	330

FEATURES:

- Made of Ø 12 mm steel rod encased in virgin polypropylene copolymer polypropylene;
- According to standard EN13101: 2002;
- Non-slip relief and side wings for added safety;
- Orange color to enhance visualization.

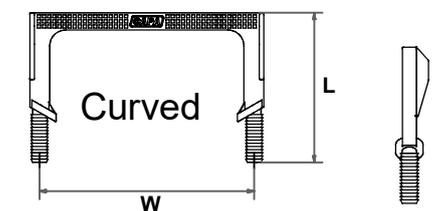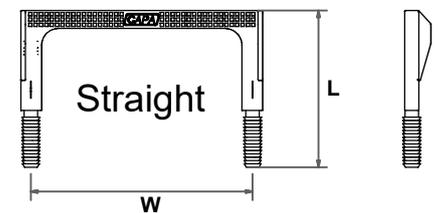

INSTALLATION LOCATION:

Insert the 85 mm step into the well.
 Recommended distance between steps: 300 mm.
 Drill 2 holes, in line, with a 25 mm drill bit, according to the separation and depth indicated on the board.
 In these holes will be placed the step, giving alternating strokes at each end until reaching the total depth.
 If the holes are accurately drilled, they do not require filling mastic.

Note: The blows should be given with a rubber mallet or guarding the step with a wooden board.